Portable CD Boombox with AM/FM Radio

Model: HS-BB008

USER MANUAL

Thank you for your purchase of this Hip Street portable CD boombox with AM/FM radio and we hope you enjoy using it. Please visit our website at www.hipstreetonline.com.

Please ensure that you fully read and understand the information within this instruction manual prior to using your product. It is advised that you keep this instruction manual in a safe place for future reference. We sincerely hope that this high quality product offers you endless hours of entertainment.

WARNING

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

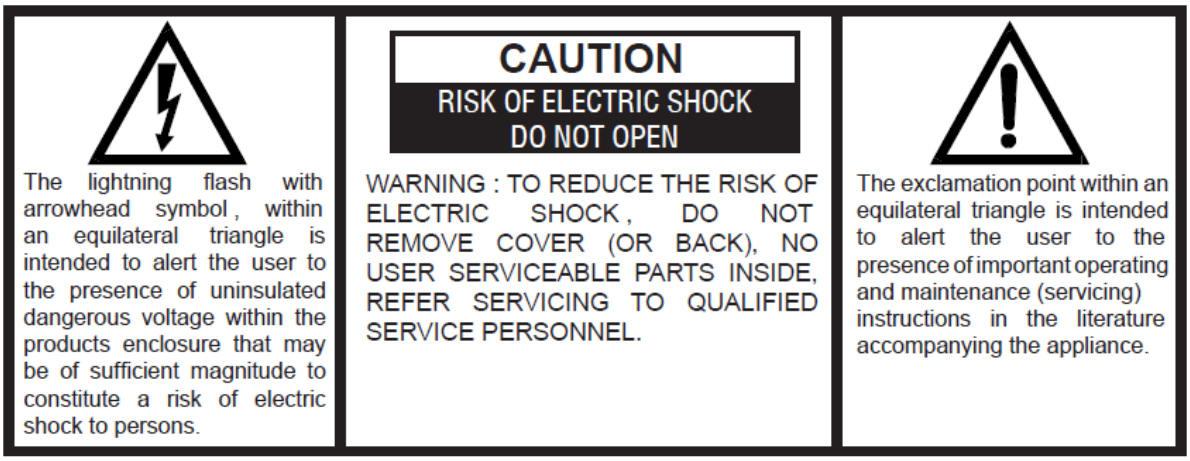
The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.
CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN
WARNING : TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK), NO USER SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.
The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

The Caution Marking is located at the bottom enclosure of the apparatus.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Cleaning: Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer. A product and cart combination should be moved with care-quick stops, excessive force and uneven surfaces may cause the product and cart combination to overturn.

9. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that product heat.
10. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety.

If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

11. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
12. Only use attachments/accessories specified by the manufacturer.
13. Unplug this apparatus during lightening storms or when unused for a long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. This appliance shall not be exposed to dripping or splashing water and that no object filled with liquids such as vases shall be placed on the apparatus.
16. Do not overload wall outlet. Use only power source as indicated.
17. Use replacement part as specified by the manufacturer.
18. The product may be mounted to a wall only if recommended by the manufacturer.
19. Upon completion of any service or repairs to this product, ask the service technician to perform safety checks.
20. Power Sources - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instruction.
21. Object and Liquid Entry - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
22. Damage Requiring Service - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
    a) When the power-supply cord or plug is damaged,
    b) If liquid has been spilled, or objects have fallen into the product,
    c) If the product has been exposed to rain or water,
    d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
    e) If the product has been dropped or damaged in any way, and
    f) When the product exhibits a distinct change in performance - this indicates a need for service.

CAUTION:
TO PREVENT ELECTRIC SHOCK,
MATCH WIDE BLADE OF AC PLUG TO WIDE SLOT.
FULLY INSERT.

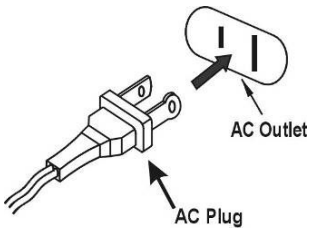

SAVE THESE INSTRUCTIONS

CAUTION

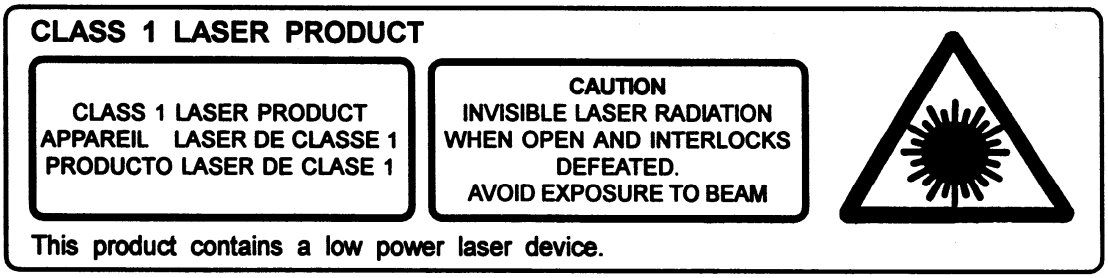

Follow the advice below for safe operations.

ON PROTECTION AGAINST LASER ENERGY EXPOSURE

- As the laser beam used in this compact disc player is harmful to the eyes, do not attempt to disassemble the casing.
- Stop operation immediately if any liquid or solid object should fall into the cabinet.
- Do not touch the lens or poke at it. If you do, you may damage the lens and the player may not operate properly.
- Do not put anything in the safety slot. If you do, the laser diode will be ON when the CD door is still open.
- If the unit is not to be used for a long period of time, make sure that all power sources are disconnected from the unit. Remove all batteries from the battery compartment.
- This unit employs a laser. The use of controls or adjustment or performance of procedures other than those specified here may result in exposure to hazardous radiation.

Should any trouble occur, remove the power source and refer servicing to qualified personnel.

COMPLIANCE WITH FCC REGULATIONS

This equipment has been tested and found to comply with the limits for a Class B Digital Device,

Pursuant to Part 15 of the FCC Rules, these limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

INTRODUCTION

Here are the main characteristics of your new boombox:

- With its compact with elegant design, this CD boombox can easily find its place at home and be installed in just a couple of minutes,
- Full compatibility: with all your Audio CDs, CD-R(W)
- With its Audio input, you can plug an external audio device with a 3.5mm output jack (headphone jack) and play the music directly through your CD boombox. (3.5mm to 3.5mm audio cable not included.)

Specification

- Top-loading CD/CD-R/CD-RW player
- AM/FM Radio (Analogue Tuning)
- LED display for CD function
- 20-track programmable memory
- AUX-IN (audio in) jack
- AC power supply
- DC 12V 8 x “C” batteries (not included)
- Output power:1.2wx2

LIST OF MAIN PARTS

Master Unit
AC cord
Manual

LOCATION OF CONTROLS

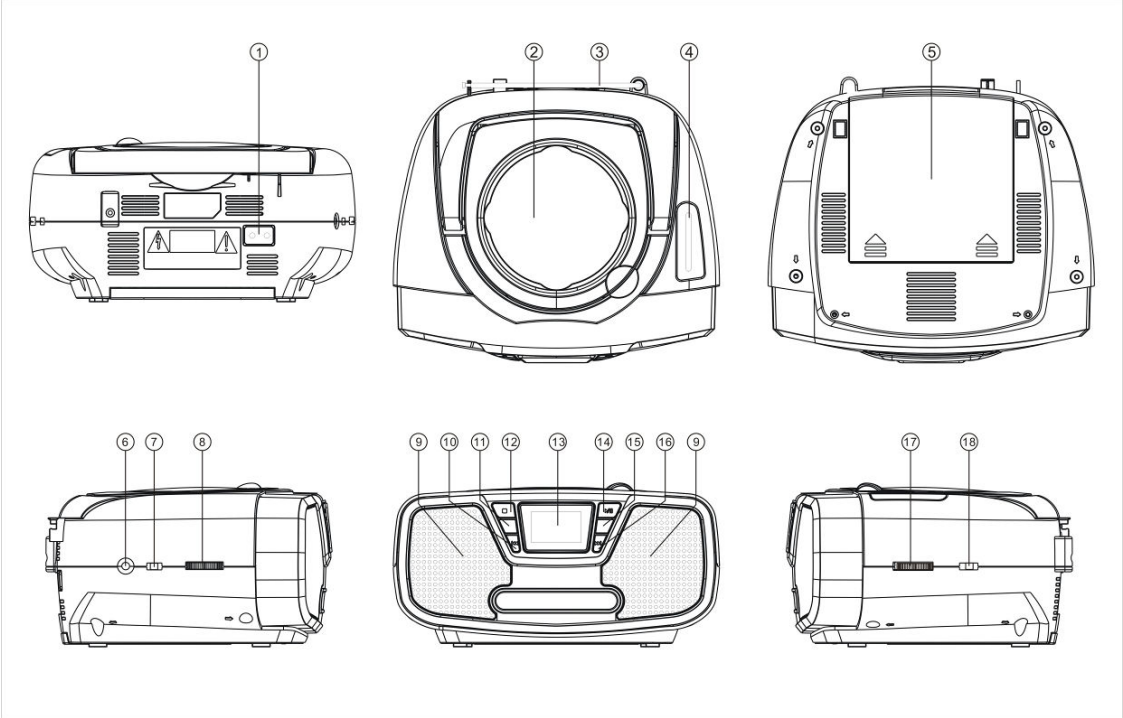

1. AC Socket
2. CD Door
3. Telescopic Antenna
4. AM/FM dial Scale/ FM Stereo Indicator
5. Battery compartment
6. Aux in (audio input) jack
7. Function Selector (CD/OFF/RADIO)
8. Volume Control
9. Speaker
10. CD REV Skip/Search
11. PROG Button
12. CD STOP Button
13. CD Track Display
14. CD PLAY/PAUSE/FUNCTION Indicator
15. REPEAT Button
16. CD FWD Skip/Search
17. Tuning Knob
18. Radio band selector

AC POWER CONNECTION

Before using the unit, check that the local power supply is compatible with the 120V, 60HZ. Do not plug or unplug the power cable when your hands are wet. When storing this unit for long periods of time, disconnect the plug from the wall outlet. When disconnecting the power cord from the wall outlet, grasp the plug; do not pull the cord in order to avoid shock risks caused by the damaged cable.

BATTERY POWER OPERATION

1. Open the Battery compartment (#5) on the underside of the unit.
2. Insert 8 x “C” size batteries (not included) following the polarity as indicated in the compartment to the right. Alkaline batteries are recommended.
3. Replace the cover properly.

VOLUME

Adjust the VOLUME control (#8) to the desired level.

CD PLAYER OPERATION

1. Set the Function Selector (#7) to the "CD" position.
2. Open the CD Door (#2). Place an audio CD with its label side upward in the CD compartment and close the CD Door.
3. After a few seconds, the total number of tracks on the CD will appear in the CD Track Display (#13).
4. Press the CD PLAY Button (#14) and the CD will start playing from the first track.
5. Adjust the Volume Control (#8) to obtain the desired sound level from the Speakers (#9).
6. To pause the music, press the CD PAUSE Button (#14). The CD Track Display will flash. To resume, press the CD PLAY Button (#14) again.
7. You can choose to play your favorite track directly by pressing the CD FWD Skip Button (#16) to skip forward or CD REV Skip Button (#10) to skip backward. The CD Track Display (#13) will indicate the correct track number selected.
8. To repeat playing a particular track, press the REPEAT Button (#15) once. The Repeat Indicator in the CD Track Display will flash.
9. To repeat playing the entire CD, press the REPEAT Button (#15) twice. The Repeat All Indicator in the CD Track Display will be solid.
10. Press the REPEAT Button (#15) a third time and the Random Indicator in the CD Track Display will stay solid and the tracks will play randomly.
11. To stop playing, press the CD STOP Button (#12).
12. When you wish to turn off the CD Player, set the Function Selector (#7) to the "OFF" position.

CD PROGRAMMED PLAY

This function allows the tracks to be played in a programmed sequence.

1. Under CD stop condition, press the PROG. Button (#11). The CD Track Display (#13) will display “P01” and the PROG. Indicator will flash.
2. Press the CD FWD Skip Button (#16) or CD REV Skip Button (#10) to select the song to be programmed.
3. Press the PROG. Button (#11) again to store selection. The CD Track Display (#13) will advance to “P02”.
4. Press the CD FWD Skip Button (#16) or CD REV Skip Button (#10) to select the next song to be programmed and press the PROG. Button (#11) to store selection.
5. You may repeat steps 2 and 3 to program as many as 20 tracks. If you attempt to program

more than 20 tracks, the CD Track Display (#13) will revert to “01” and the old entry will be overwritten by the current new entry.

6. Press the CD STOP Button (#12) to end programming and return to normal play mode.
7. To check the programmed tracks, press PROG Button (#11) continuous to show all the programmed songs. The CD Track Display (#13) will display the program number first and then followed by the flashing track number.
8. Press CD PLAY Button (#14) to begin programmed schedule. The first track in the program will appear in the CD Track Display (#13) and the PROG Indicator will stay solid.
9. To cancel the programmed schedule, press the CD STOP Button (#12).
10. As long as the unit remains powered on and the CD Door (#2) is not opened, you can resume programmed play any time by pressing the PROG. Button (#11) and then the CD PLAY Button (#14) while stopped.

AUX IN (Audio in) FUNCTION – Connecting the device with an external audio device

This device has an audio input function. Please connect the source with an audio cable (not included) to the AUX IN jack. The mode will jump to AUX IN automatically.

RADIO RECEPTION

1. Set the Function Selector (#7) to the "RADIO" position.
2. Set the Band Selector (#18) to either "AM", “FM” or “FM Stereo” for the desired radio band.
3. Adjust the Tuning Knob (#17) to obtain the desired radio station.
4. Adjust the Volume Control (#8) to obtain the desired sound level.
5. You may need to adjust the telescopic antenna (#3) for better reception.
6. When you wish to turn off the Radio, set the Function Selector (#7) to the "OFF" position.

TIPS FOR GOOD RADIO RECEPTION

1. To insure maximum FM tuner sensitivity, the Telescopic Antenna (#3) should be fully extended and rotated / adjusted to obtain the best possible reception. The FM Stereo Indicator (#4) will stay solid when a stereo FM station is being received.
2. When tuning in AM reception, be sure to place the telescopic antenna in a vertical position. To insure the maximum AM sensitivity, try repositioning the unit until the best reception is obtained.

CARE AND MAINTENANCE

1. Clean your unit with a damp (never wet) cloth. Solvent or detergent should never be used.
2. Avoid leaving your unit in direct sunlight or in hot, humid or dusty places.
3. Keep your unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors.
4. If interruptions occur in the music during CD play, or if the CD fails to play at all, its bottom surface may require cleaning. Before playing, wipe the disc from the center outwards with a good soft cleaning cloth.

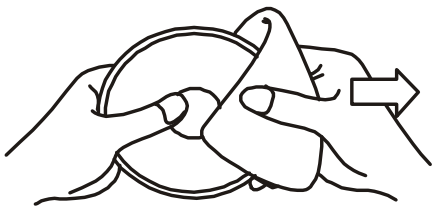

TROUBLESHOOTING GUIDE

Should you experience difficulties in the use of this player please refer to the following chart.

Issue	Possible Cause	Solution
There is no display and the unit will not play	• The unit is disconnected from the AC outlet	• Connect to an outlet.
	• The AC outlet has no power	• Try the unit on another outlet
	• The AC outlet is controlled by a wall switch	• Do not use an outlet that is controlled by a wall switch
	• Weak batteries	• Replace with fresh batteries
Poor AM or FM reception	AM: Weak on distant stations	• Rotate the cabinet for better reception
	FM: Telescopic Antenna not extended	• Extend Telescopic Antenna and adjust
Unit ON but there is low or no volume	• The volume Control has been turned all the way down	• Turn the volume control to a higher output
CD skip while playing	• Dirty or scratched discs	• Check the bottom of the disc and clean it with a soft cleaning cloth, always wipe from the center out or use another disc
	• Dirty lens	• Clean with a commercially available lens cleaner

Need assistance? Please call us!

If you encounter any difficulties with this product, please visit our website at **www.hipstreetonline.com** and review our support section or call us. Our representatives are ready to help you with any questions about your product. We can guide you through connections, first-time use, or any of the features. Just give us a call or send us an email.

Customer & Technical Support: **1-888-4KOBIAN** or **1-888-456-2426**
Monday through Friday: 8:30am – 5:00pm EST
Email: **support@hipstreetonline.com**

We want you to start enjoying your product right away!